


Roller Support Assembly Instructions

Install Push Nut onto (1) end of shaft (Detail A). Place Roller between both Uprights and insert Shaft thru both Uprights and Roller. Install remaining Push Nut onto the other end of the Shaft. Press in the Finishing Caps into both Uprights. Press in the Finishing Caps into both Uprights.

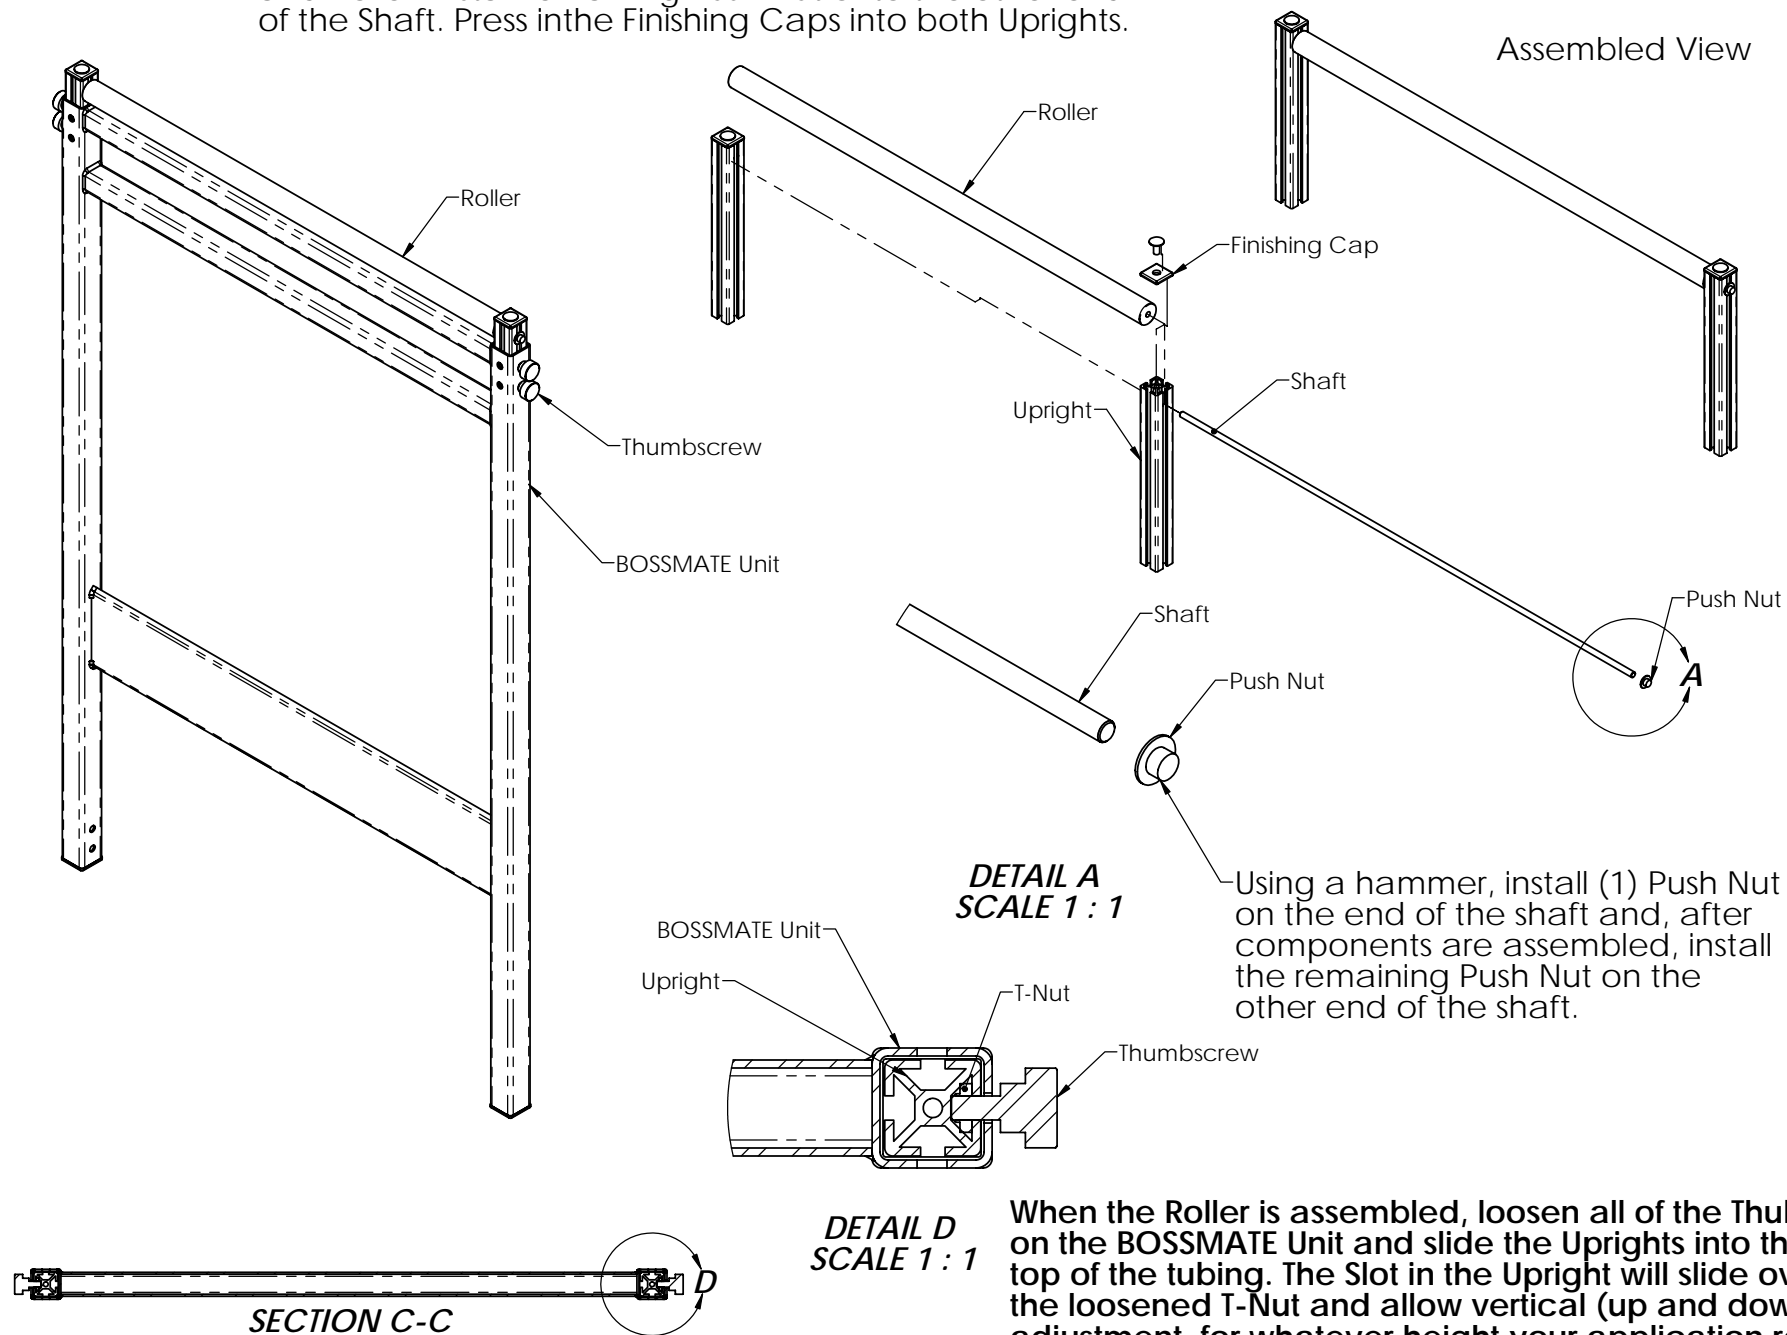

When the Roller is assembled, loosen all of the Thumbscrews on the BOSSMATE Unit and slide the Uprights into the top of the tubing. The Slot in the Upright will slide over the loosened T-Nut and allow vertical (up and down) adjustment for whatever height your application requires. When the Roller is set at the desired height, tighten the Thumbscrews to lock the Roller into place.